

SX MULTI

MANUAL SX MULTI



CARACTERÍSTICAS TÉCNICAS

- ✓ MODELO SX MULTI
- ✓ 2 BATERÍAS 2025
- ✓ FRECUENCIA 433,92 MHZ
- ✓ 12 CANALES

1. CÓMO FUNCIONA:

Los diferentes botones del mando funcionan como comandos diferentes, por ejemplo, un botón funciona para Abrir, otro para Cerrar y otro para Parar. En la tabla 2 se muestran los detalles para la programación de las distintas marcas.

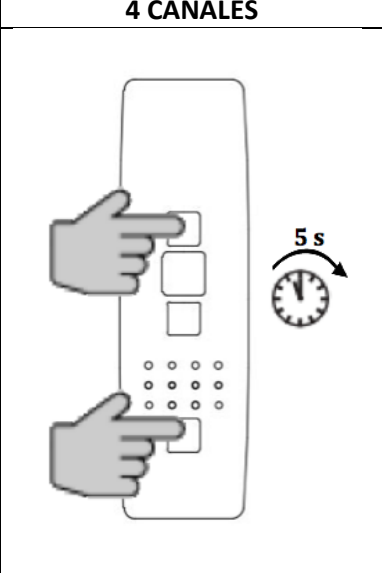
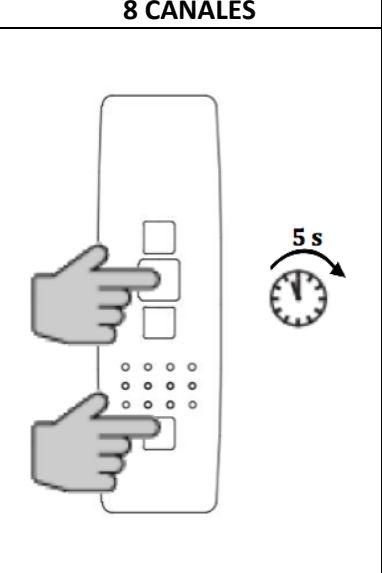
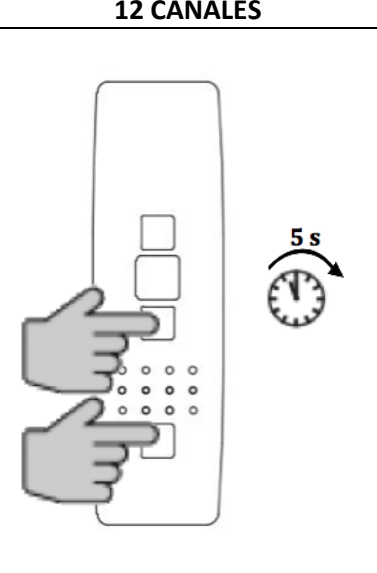
1. Presione el botón ABRIR en el mando programado. El motor se abrirá hasta que alcance el límite de apertura.
2. Presione el botón CERRAR en el mando programado. El motor se cerrará hasta que alcance el límite de cierre.
3. Presione el botón PARAR en el mando programado. El motor se parará.

2. SELECCIÓN DEL NÚMERO DE CANALES:

Hay tres opciones, 4-8-12 canales. La selección del diferente número de canales disponibles es simple, en la tabla 1 mostrada a continuación, se muestran las combinaciones para cada opción.

SX MULTI

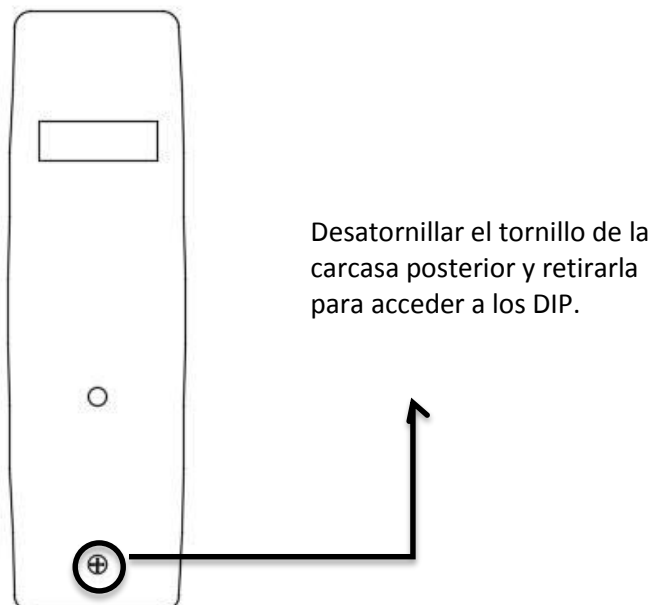
Tabla 1: Selección del número de canales

4 CANALES	8 CANALES	12 CANALES
		

Para programarlo, presionar la configuración deseada durante 5 segundos, el mando emite 3 flashes con el número de canales seleccionado, confirmando que la programación ha sido correcta.

2. COMO ACCEDER A LOS DIP:

Para acceder a los DIP para la selección de la marca, hay que desatornillar la carcasa trasera del mando. Al retirar la carcasa se tiene acceso a los DIP. Se muestra una figura explicativa:



SX MULTI

Tabla 2: Posición de las marcas

Num	Interruptores DIP	Marca	Frecuencia	Original
1		Compatible SOMFY	433.92 Mhz	
2		Compatible V2		
3		Compatible JOLLY MOTORS		
4		Compatible DOOYA		
5		Compatible ABC REMOTE		

SX MULTI

MANUAL FOR SX MULTI



TECHNICAL FEATURES

- ✓ MODEL SX MULTI
- ✓ 2 BATTERY 2025
- ✓ FREQUENCY 433,92 MHZ
- ✓ 12 CHANNELS

1. HOW IT WORKS:

The different buttons on the remote work as different commands, for example, one button work for Open, another one for Close and the other for Stop. The details for selecting the brands are shown in table 2.

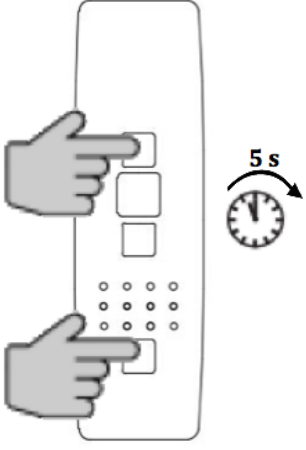
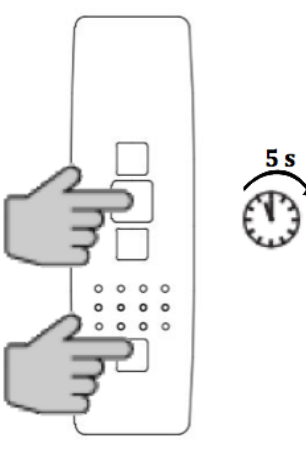
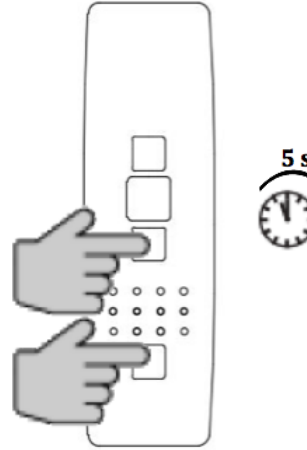
1. Press OPEN button on the learnt remote. The motor will work opening until it reaches full open limit.
2. Press CLOSE button on the learnt remote. The motor will work closing until it reaches full close limit.
3. Press STOP button on the learnt remote. The motor will stop.

2. CHANNEL SELECTION:

There are three options, 4-8-12 channels. The selection of the different number of channels available is simple, in the table 1 below is shown the combination for every option.

SX MULTI

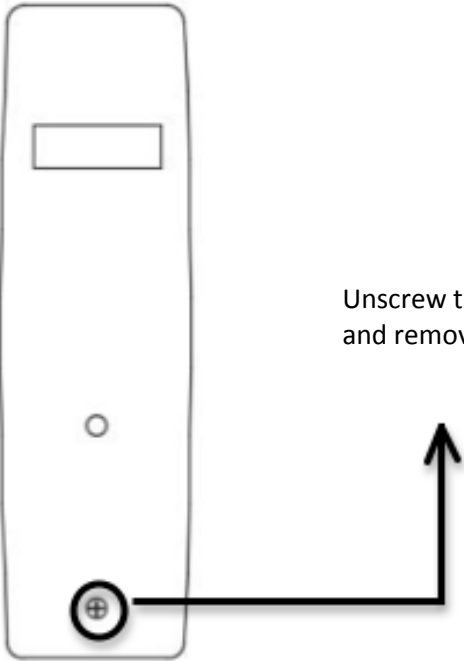
Table 1: Channel selection

4 CHANNELS	8 CHANNELS	12 CHANNELS
		

For programming , press the configuration from the table for 5 seconds, the remote will flash 3 times with the channel number selected, confirming that it is correctly programmed.

2. DIP ACCESS:

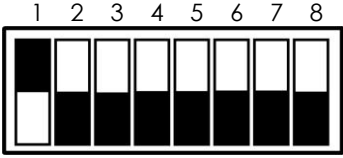

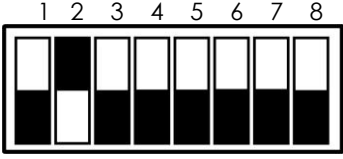

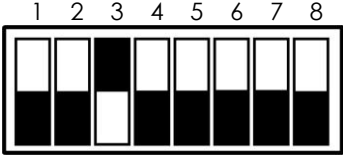

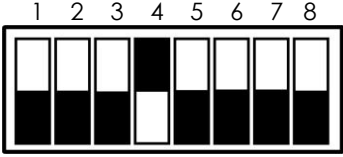

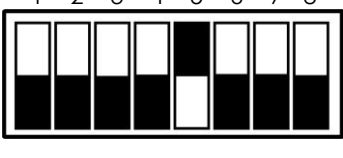
For selecting the DIP is necessary to unscrew the bottom case. After this; carefully, remove the bottom case, this way the DIP are accesible. Watch the figure below:



Unscrew the bottom button case and remove it.

SX MULTI

Table 2: Brands positions

Num	DIP SWITCHES	Brand	Frequency	Original
1	 <p>1 2 3 4 5 6 7 8</p>	Compatible SOMFY	433.92 Mhz	
2	 <p>1 2 3 4 5 6 7 8</p>	Compatible V2		
3	 <p>1 2 3 4 5 6 7 8</p>	Compatible JOLLY MOTORS		
4	 <p>1 2 3 4 5 6 7 8</p>	Compatible DOOYA		
5	 <p>1 2 3 4 5 6 7 8</p>	Compatible ABC REMOTE		